Brake Booster Function Test

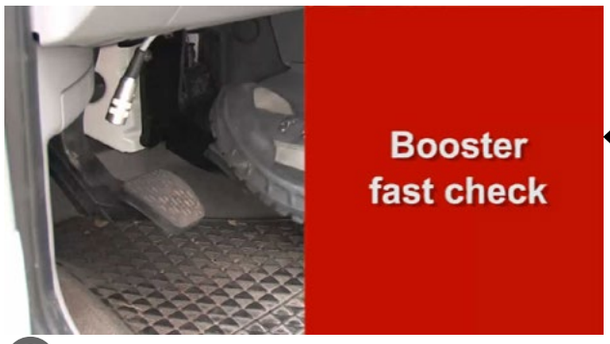

1. Fast check

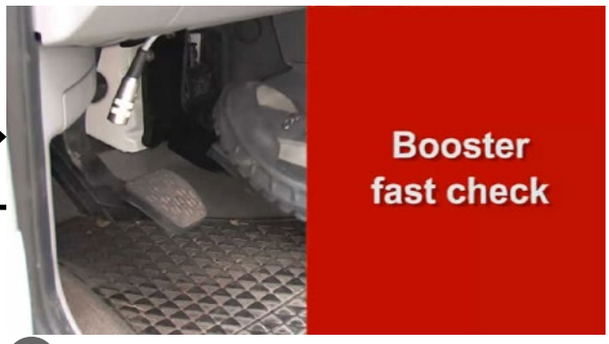

Booster OK!

2. System check

Check the entire vacuum system including all connected components like: Vacuum pump, EGR valve etc. Make sure, that all hoses and connectors are in perfect condition.

3. Non-return valve check

Check the non-return valve for contamination (oil) and damages.
Change non-return valve if necessary.

4. Booster leakage check

Check the booster for contamination (oil) and damages.
Change booster if necessary.

©TRW Automotive Techdocu Neuwied